

SC-35 Mini

Mini Receiver

1 Technique data


Emitter: (EH Series)

- Power supply: 3V/ CR2430
- Protection Index: IP 15
- Frequency: 433.92MHz
- Working Current: ≤ 8mA
- Code: Rolling code

Receiver: (Built in PCB in side of the motor)




- Power supply: AC230V/50Hz
- Rated load: ≤ 400W
- Receive frequency: 433.92MHz
- Be cut off automatically after working for 2mins continuously
- Handle up to 15 remotes at most.

2 Wires Connect

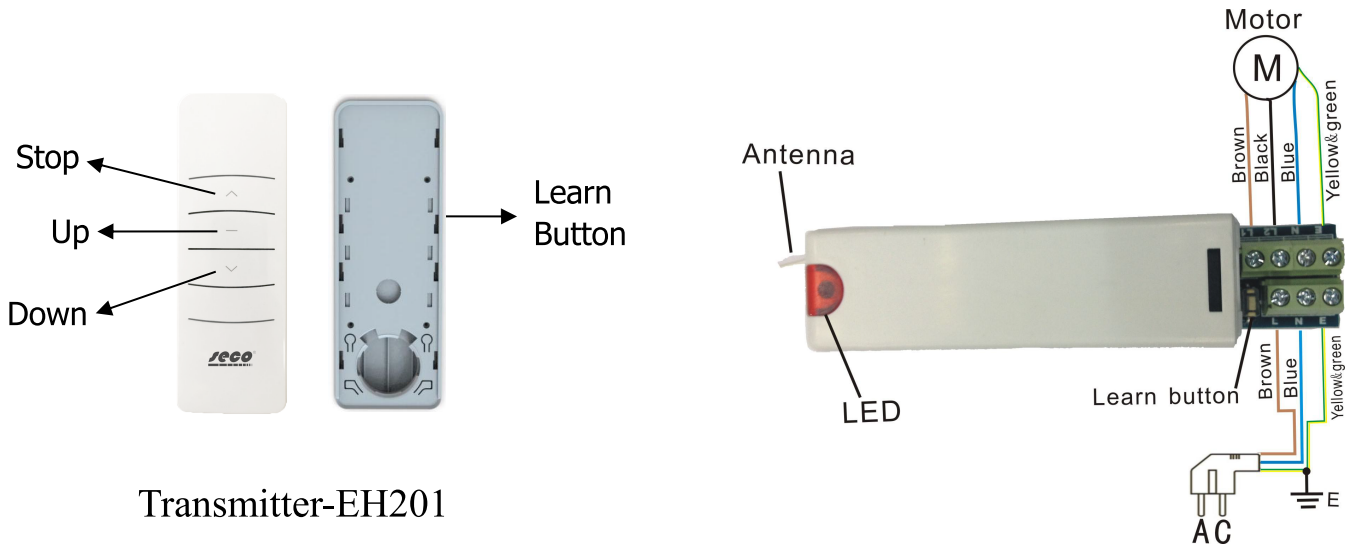

Transmitter-EH201

  3 Programming the transmitter

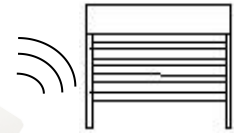




1) Switch on the power and the motor will briefly jerk, shortly press the learn button on the receiver, the motor will briefly jerk and the red led be off.

2) Press learn button of transmitter once in 10s, and the motor will jerk again

☺ The motor can be controlled by emitter successfully.

Note: You can control the motor's traveling by up, stop and down button after programming.

  4 Copy the programming

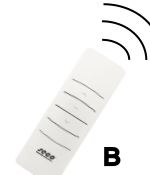

1) Press learn button on the back of A six times and the motor will briefly jerk.


2) Press learn button on the back of B once and the motor will jerk again.

☺ The motor can be controlled by B successfully.

Note: Emitter B successfully copies the programming of A, it can control the motor like Emitter A.

SC-35 Mini Mini Receiver

5 Deletion of the transmitter

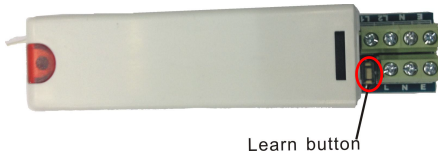

1) long press the learn button on the receiver (for approx. 3 sec). The red LED will be off and the motor will briefly jerk once. Don't relax the Learn button until the motor briefly jerks twice. Then the red LED on the receiver will be on, which means the programming is deleted successfully.

Note: No emitter can control this motor after deleting the programming unless you reprogram it.


 
6 Opposite Direction



1) Press learn button three times.



2) Press Down button once, the motor will jerk.

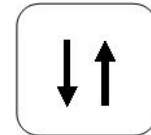

⊖ The motor will be operated in the opposite direction.


 
7 Inching mode



1) Press learn button two times.



2) Press Up button once, the motor will jerk.

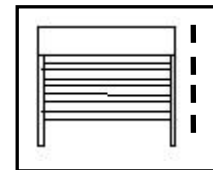

Note: Under inching mode, if long press up & down button of emitter, the motor runs continuously.


 
8 Deleting Inching



1) Press learn button two times.



2) Press Down button once, the motor will jerk.

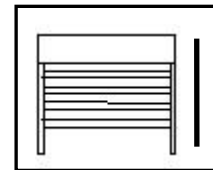

⊖ The motor runs continuously.



Caution

- Please reprogram if there is interference from other signals leads to the failure.
- This instruction is compatible with the hand held transmitter that is H series.
- In order to prolong the battery life, please do not long press the emitter's buttons. The better operation is to press the button about 0.5s with 1s interval. It would stop working when the battery is in low power. Please replace proper type one for the emitter in time.
- The receiver is of high voltage. Keep it away from Water and Children.
- Permitted ambient temperature: -10°C ~ +55 °C.
- Don't use any cleaning agents to clean the transmitter. This may attack the plastic.